

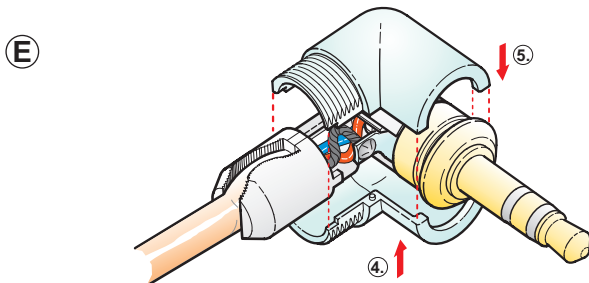
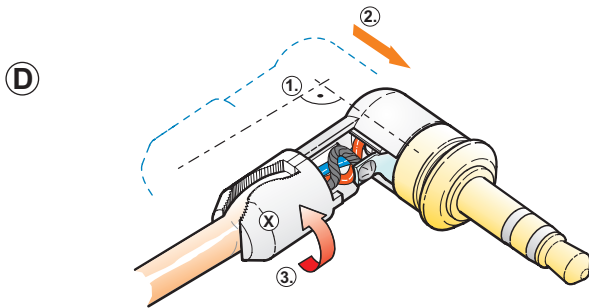
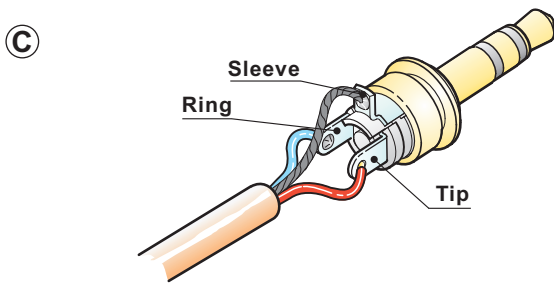


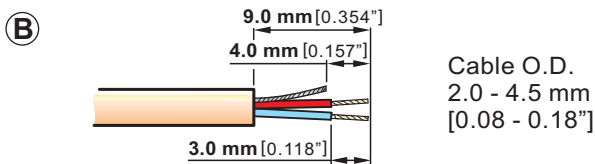

ASSEMBLY INSTRUCTION

NEUTRIK tinyPLUG | 3.5 mm right-angle stereo plug

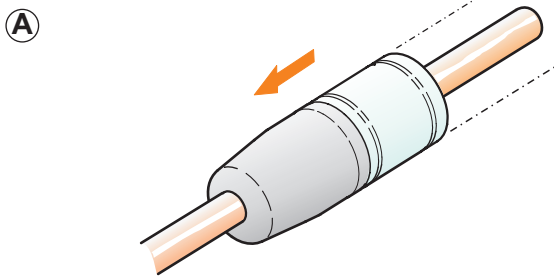

(A) Slide the boot onto the cable.

(B) Prepare cable as shown.


(C) Solder the wire ends .

(D) Assembly of strain relief:

- 1 Bend cable by 90° towards the sleeve contact.
- 2 Position the chuck on the connector body.
- 3 Close the strain relief (break away part **(X)** if cable O.D. > 3.2 mm)

(E) Place the shell halves onto the connector body.

(F) Slide the bushing up to the thread and tighten it.

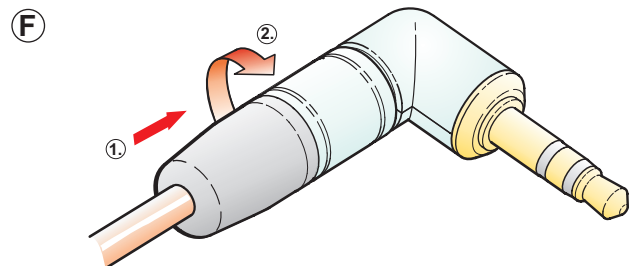

NEUTRIK AG LI T: +423 / 237 24 24 F: +423 / 232 53 93
NEUTRIK USA Inc. USA T: +1 704 / 972 3050 F: +1 704 / 438 9202
NEUTRIK (UK) Ltd. UK T: +44 1983 / 811 441 F: +44 1983 / 811 439
NEUTRIK Vertriebs GmbH DE/NL/AT/DK T: +49 8131 / 280 890 F: +49 8131 / 280 830

NEUTRIK France FR T: +33 1 / 4131 6750 F: +33 1 / 4131 0511
NEUTRIK Tokyo Ltd. JP T: +81 3 / 3663 4733 F: +81 3 / 3663 4796
NEUTRIK Hong Kong Ltd. HK T: +852 / 2687 6055 F: +852 / 2687 6052

Draft. Nr.: BDA 128 / 3102M1241 | Update: 11.01.2013 | Data subject to change without prior notice. ©2013 NEUTRIK®. ALL RIGHTS RESERVED. NEUTRIK® are registered trademark.