


Get started with the Qutest Stand System



Register 1.0

To document your purchase and get the best service experience, we recommend that you register your Qutest Stand System. Peace of mind can be achieved in under one minute! Simply visit the following link:

chordelectronics.co.uk/register-product

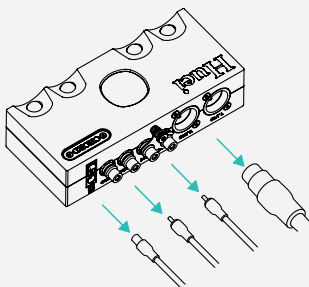


Disconnect 2.0

If the product that you wish to place into the Qutest Stand System is currently connected to your system, please safely turn off the power to all components and remove the connections.




Stand System 3.0

Bring the unit directly from above the Qutest Stand System and slowly lower it down, paying careful attention to align each edge with the protective plastic corner guides. Do not use force or make any jerking movements.

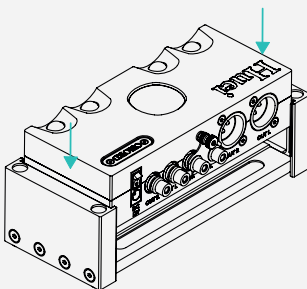

Placement 4.0

When the Qutest product's rubber feet reach the bottom of the Qutest Stand System and the bottom of the device touches the thermal mesh, the unit has been successfully installed. The unit will be gently cradled and there is nothing further to adjust.

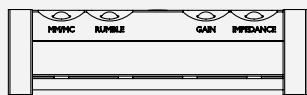





Get started with the Qutest Stand System



Arrangement 5.0

To add further units to additional Qutest Stand System tiers, repeat the steps above. Once complete, they can be placed adjacently, or stacked as shown.

If stacking more than one stand, ensure the rubber feet at the base of the tier correctly locate into the recesses on the top of the adjoining stand.

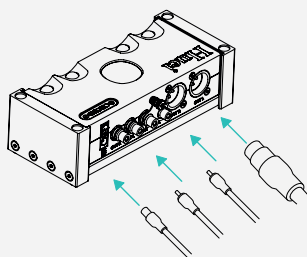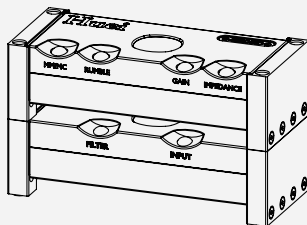

Reconnect 6.0

With correct placement, proceed to reconnect the Qutest range devices.



Discover 7.0

Learn more about the Qutest range and discover the latest additions by visiting:

chordelectronics.co.uk/product-range/qutest

